



High Performance Metal Solutions

H.C. Starck Solutions' Radiation Shielding Products for Nuclear Medicine

H.C. Starck Solutions' advanced engineered components enable nuclear medicine and molecular imaging to absorb X-ray and gamma radiation to provide safer diagnostic and therapeutic treatment. H.C. Starck Solutions' tungsten alloy components are utilized in gamma cameras, PET scanners, brachytherapy, and the handling of radioactive isotopes.

As a global leader in refractory metals technology, H.C. Starck Solutions has a trusted integrated supply chain delivering high performance materials from powders to semi-finished and finished products. We partner with customer to develop components for the latest radiation shielding technology including build-to-print components and design assistance in machining tungsten alloy materials.

Materials

- > Tungsten and Tungsten Alloys
- > Tungsten Alloy Powders for 3D Binder Jet Printing

Applications

- > Radioactive Source Containers for Isotope
- > Radioactive Isotopes Injection Shielding Storage and Transport
- > PET Scanners and Radiotherapy

H.C. Starck 

High Performance Metal Solutions

Radiation Shielding with Tungsten Alloys

Radiation shielding plays a key role in nuclear medicine, particularly, in the handling of radioactive materials. Radioactive source containers for transporting radioactive materials from PET isotope production centers to cancer treatment hospitals, and syringe covers for injecting radioactive isotopes require tungsten alloys for shielding against radiation contamination. H.C. Starck Solutions' PET SEPTA plates are produced for collimation shielding in PET scanners.

H.C. Starck's Fabricated Products for Nuclear Medicine


H.C. Starck Solutions offers complex-shaped components with density ranging from 17.2 to 18.5 g/cc per customer design.

Materials	Fabricated Products	Application	End Use
Tungsten Alloys	> Isotope Containers	> Cancer Treatment „Afterloader“	> Radioactive Source Handling Components > Brachytherapy > Tc99 Generator
Tungsten Alloys	> Syringe Covers	> Radioactive Isotope Shielding > Vial Shielding	> Radioactive Isotope Injection
Tungsten Alloys	> PET SEPTA Plates	> Collimation and Shielding	> PET Scanners
Tungsten Alloy Powders	> Gamma Camera Collimator > 3D Printed Parts	> Collimators > Anti-Scatter Grids > Binder Jet Printing	> Gamma Camera

Tungsten's Radiation Absorption Efficiency

The absorption of x-rays and gamma radiation is in direct proportion to the density of the shielding material. H.C. Starck Solutions' tungsten alloys are more than 1.5 times as effective as lead and deliver extremely effective protection, particularly where space is limited.

Gamma Ray Energy (MeV)
RADIATION ABSORPTION EFFICIENCY

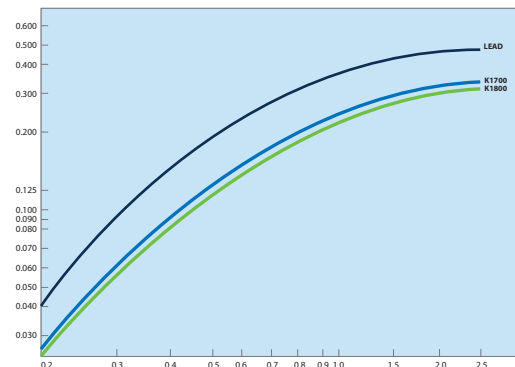

The conditions of your use and application of our products, technical assistance and information (whether verbal, written or by way of production evaluations), including any suggested formulations and recommendations, are beyond our control. Therefore, it is imperative that you test our products, technical assistance and information to determine to your own satisfaction whether they are suitable for your intended uses and applications. This application-specific analysis at least must include testing to determine suitability from a technical as well as health, safety, and environmental standpoint. Such testing has not necessarily been done by H.C. Starck Solutions. All information is given without warranty or guarantee. It is expressly understood and agreed that the customer assumes and hereby expressly releases H.C. Starck Solutions from all liability, in tort, contract or otherwise, incurred in connection with the use of our products, technical assistance and information. Any statement or recommendation not contained herein is unauthorized and shall not bind H.C. Starck Solutions. Nothing herein shall be construed as a recommendation to use any product in conflict with patents covering any material or its use. No license is implied or in fact granted under the claims of any patent. Properties of the products referred to herein shall as general rule not be classed as information on the properties of the item for sale. In case of order please refer to issue number of the respective product data sheet. All deliveries are based on the latest issue of the product data sheet and the latest version of our General Conditions of Sale and Delivery.

The values in this publication are typical values and do not constitute a specification.

For additional info please contact:

H.C. Starck Solutions Euclid, LLC
 21801 Tungsten Road
 Euclid, OH 44117 USA
 Phone: +1 216 692 3990
 info@hcstarcksolutions.com
 www.hcstarcksolutions.com